

Appendix – Supplementary Materials

Machine-Learning Histology Analysis of Heterogeneous glaber

Julian Coles, Martin Orkuma, Pamela Styborski, and Silvia Tenempaguay-Nunez

Table of Contents

A. Data Source and Ingestion

- Data injection code

B. Data Quality Assessment & Cleaning

- File presence checks
- XML integrity and filename consistency checks

C. Supplementary Tables

D. Supplementary Code

- Python code for data composition of .xml files (Objective 1 Table 1)
- Python code for data composition of .xml files (Objective 1 Table 2)
- Python code for data composition of .xml files (Objective 1 Table 3)
- Image-level characteristics summary (Table 4)
- Python code to create tissue-specific RGB histograms (Figure 1)
- Python code used for plotting and running analysis with QuPath provided metrics
- Python code to create a montage of whole-slide images

E. Additional Figures

- Supplemental Figure 1 - Cell and Nucleus Count Summary per Slide
- Supplemental Figure 2 - Boxplot Representation of the Distribution of Nuclear Area Across all 9 Slides
- Supplemental Figure 3 - Bootstrapping output from QuPath Analysis
- Supplemental Figure 4 - Montage showing all 9 whole-image slides

F. References

Data Ingestion

The datasets used in this analysis were obtained from the MOTHER Database: <https://mother-db.org/search/>

Download script: `scripts/download_mother_nmr.sh`

https://github.com/ReproAnalytics/nmr-ovarian-follicle-ml/blob/main/scripts/download_mother_nmr.sh

```
#!/usr/bin/env bash
# Goal: To download nmr histology data from the MOTHER database.
set -euo pipefail
```

```
SEARCH_URL="https://mother-db.org/search/?
_sfm_genus_taxon_rank_value=Heterocephalus&sfm_species_taxon_rank_value=He
terocephalus%20glaber"

# Where to store downloads, run from repo root and adjust to match your
repo layout.
DEST_ROOT="${1:-data/raw/H_glaber}"

mkdir -p "$DEST_ROOT"

echo "Fetching search page..."

search_html="$(curl -fsSL "$SEARCH_URL")"

# Extract unique accession IDs like MDB00000530
mapfile -t accessions < <(&printf "%s" "$search_html" \

    | grep -oE 'MDB[0-9]{7}' \

    | sort -u)

if [[ "${#accessions[@]}" -eq 0 ]]; then

    echo "X - No accessions found on the search page. Page structure may have
changed."

    exit 1

fi

echo "Found ${#accessions[@]} accessions:"

printf " - %s\n" "${accessions[@]}"

echo

echo "Downloading resources to: $DEST_ROOT"

echo

for acc in "${accessions[@]}; do

    echo "==> $acc"

    acc_dir="$DEST_ROOT/$acc"

    mkdir -p "$acc_dir"

    folder_url="https://mother-db.org/resource-folder/?path=${acc}"

    # Fetch the resource-folder HTML and extract direct file links
    folder_html="$(curl -fsSL "$folder_url")"
```

```

mapfile -t file_urls < <(printf "%s" "$folder_html" \
    | grep -oE 'https?://resources\.mother-db\.org[^\"]+' \
    | sort -u)

if [[ "${#file_urls[@]}" -eq 0 ]]; then

    echo "X - No resource links found for $acc (skipping)."

    continue

fi

# Download each file (resume supported with -C -)
for url in "${file_urls[@]"; do

    fname="$(basename "${url%%\?*}")"

    outpath="$acc_dir/$fname"

    if [[ -f "$outpath" ]]; then

        echo " - exists: $fname (skipping)"

        continue

    fi

    echo " - downloading: $fname"

    curl -fL -C - -o "$outpath" "$url"

done

echo

done
echo "Done!"

```

Data Quality Assessment & Cleaning

File presence checks.

```

# File presence check:
def scan_donor_folder(donor_dir: Path) -> DonorRow:
    warnings: List[str] = []

    accession_id = donor_dir.name

    issues: List[str] = []

```

```
tiff_path, tiff_hits = find_single_file(donor_dir, TIFF_EXTS)

xml_path, xml_hits = find_single_file(donor_dir, (XML_EXT,))

reduced_png = find_png_by_suffix(donor_dir, EXPECTED_PNG_SUFFIXES[0])
thumbnail_png = find_png_by_suffix(donor_dir, EXPECTED_PNG_SUFFIXES[1])


if tiff_path is None:

    issues.append("missing_tiff" if len(tiff_hits) == 0 else
f"multiple_tiffs({len(tiff_hits)})")

    if xml_path is None:

        issues.append("missing_xml" if len(xml_hits) == 0 else
f"multiple_xmls({len(xml_hits)})")

    if reduced_png is None:

        issues.append("missing_reduced_png")

    if thumbnail_png is None:

        issues.append("missing_thumbnail_png")

row = DonorRow(

    accession_id=accession_id,

    donor_dir=str(donor_dir.as_posix()),

    tiff_path=str(tiff_path.as_posix()) if tiff_path else "",

    xml_path=str(xml_path.as_posix()) if xml_path else "",

    reduced_png_path=str(reduced_png.as_posix()) if reduced_png else
"",

    thumbnail_png_path=str(thumbnail_png.as_posix()) if thumbnail_png
else "",

    ok=len(issues) == 0,

    issues=issues,

    warnings=warnings,

    tiff_candidates=";".join([p.name for p in tiff_hits]),

    /
```

```

        xml_candidates=";".join([p.name for p in xml_hits]),
    )

# TIFF sizes + header hints
if tiff_path and tiff_path.exists():

    row.tiff_size = tiff_path.stat().st_size

    qc = tiff_quickcheck(tiff_path)

    row.tiff_pages = qc.get("tiff_pages") # type: ignore
    row.tiff_series_count = qc.get("tiff_series_count") # type: ignore
    row.tiff_is_ome = qc.get("tiff_is_ome") # type: ignore
    row.tiff_shape_hint = qc.get("tiff_shape_hint") # type: ignore

    if tiffiff is not None and row.tiff_pages is None:

        row.issues.append("tiff_unreadable_header")

```

XML integrity and filename consistency checks

```

# XML sizes + metadata extraction
if xml_path and xml_path.exists():
    row.xml_size = xml_path.stat().st_size
    try:
        meta = parse_mother_xml(xml_path)
        for k, v in meta.items():
            setattr(row, k, v)
    except Exception as e:
        row.issues.append(f"xml_parse_error({e.__class__.__name__})")

# Validate that mdb block exists (donorID/slideID are good proxies)
if row.donorID is None and row.slideID is None:
    row.issues.append("xml_missing_mdb_mother_block")

# Filename consistency checks using slideID / donorID if present
(warnings only)
fnames = " ".join([p.name for p in donor_dir.iterdir() if
p.is_file()]).lower()
fn_norm = normalize_for_match(fnames)

if row.slideID:
    slide_norm = normalize_for_match(row.slideID)
    if slide_norm and slide_norm not in fn_norm:
        row.warnings.append("slideID_not_in_filenames")

```

```
if row.donorID:
    donor_norm = normalize_for_match(row.donorID)
    if donor_norm and donor_norm not in fn_norm:
        row.warnings.append("donorID_not_in_filenames")

if reduced_png and reduced_png.exists():
    row.reduced_png_size = reduced_png.stat().st_size
if thumbnail_png and thumbnail_png.exists():
    row.thumbnail_png_size = thumbnail_png.stat().st_size
```

Supplementary Tables

Supplemental Table I: Source information for .xml data pulled from MOTHER

	Source	Title	Organization	Author_First	Author_Last	Author_Contact
0	MDB0000530-P28-Ova-106_s55.xml	Briefo Lab: NMR Postnatal Ovary P28 (Ova106-s55)	University of Pittsburgh	Odei	Barreñada	barrenadatalebo@upmc.edu
1	MDB0000531-P1-11-s40.xml	Briefo Lab: NMR Postnatal Ovary P1 (Ova11-s40)	University of Pittsburgh	Odei	Barreñada	barrenadatalebo@upmc.edu
2	MDB0000532-P15_F09OV-s83.xml	Briefo Lab: NMR Postnatal Ovary P15 (F09-s83)	University of Pittsburgh	Odei	Barreñada	barrenadatalebo@upmc.edu
3	MDB0000533-P180_6Mon-6b-s86.xml	Briefo Lab: NMR 6-Months Ovary (6B-s86)	University of Pittsburgh	Odei	Barreñada	barrenadatalebo@upmc.edu
4	MDB0000534-P5-23-s13.xml	Briefo Lab: NMR Postnatal Ovary P5 (Ova23-s13)	University of Pittsburgh	Odei	Barreñada	barrenadatalebo@upmc.edu
5	MDB0000535-P8-F02-OV-s135.xml	Briefo Lab: NMR Postnatal Ovary P8 (F02-s135)	University of Pittsburgh	Odei	Barreñada	barrenadatalebo@upmc.edu
6	MDB0000536-P90-NMR_3Mo-3B-s96.xml	Briefo Lab: NMR Postnatal Ovary P90 (3B-s96)	University of Pittsburgh	Odei	Barreñada	barrenadatalebo@upmc.edu
7	MDB0000537-2653-3y-Exsub-s19.xml	Briefo Lab: NMR Ovary 3y Ex-subordinate (2653-...	University of Pittsburgh	Odei	Barreñada	barrenadatalebo@upmc.edu
8	MDB0000538-2659-3y-Sub-s109.xml	Briefo Lab: NMR Ovary 3y Subordinate (2659-s109)	University of Pittsburgh	Odei	Barreñada	barrenadatalebo@upmc.edu

Supplementary Python Code

Python Code for Data Composition of .xml files – Objective 1 Table 1

```
# import pandas library and security bypass
import pandas as pd
import requests
# XML files have complex element trees
# will require manual extraction so we import element trees here
import xml.etree.ElementTree as ET
import io

# Add all xml files as urls
urls = [

    "https://resources.mother-db.org/slides/MDB0000530/MDB0000530-P28-Ova-106_s55.xml",

    "https://resources.mother-db.org/slides/MDB0000531/MDB0000531-P1-11-
```

```

s40.xml",

"https://resources.mother-db.org/slides/MDB0000532/MDB0000532-P15_F090V-
s83.xml",

"https://resources.mother-db.org/slides/MDB0000533/MDB0000533-P180_6Mon-6b-
s86.xml",

"https://resources.mother-db.org/slides/MDB0000534/MDB0000534-P5-23-
s13.xml",

"https://resources.mother-db.org/slides/MDB0000535/MDB0000535-P8-F02-0V-
s135.xml",

"https://resources.mother-db.org/slides/MDB0000536/MDB0000536-P90-NMR_3Mo-
3B-s96.xml",

"https://resources.mother-db.org/slides/MDB0000537/MDB0000537-2653-3y-
Exsub-s19.xml",

"https://resources.mother-db.org/slides/MDB0000538/MDB0000538-2659-3y-Sub-
s109.xml"

]

```

```

# Create headers for all data frames
# This has to be done before every table
headers = {'User-Agent': 'Mozilla/5.0'} all_dfs = []

# Create for loop

for url in urls:

response = requests.get(url, headers=headers)

if response.status_code == 200:
    root = ET.fromstring(response.content)

    # Find data points
    record = {
        "Source": url.split('/')[-1],
        "Title": root.findtext(".*//title").strip() if
root.find(".*//title") is not None else "N/A",
        "Organization":
root.findtext(".*//organizationName").strip() if
root.find(".*//organizationName") is not None else "N/A",

        # Find Primary Author
        "Author_First":
root.findtext(".*//creator//givenName").strip() if
root.find(".*//creator//givenName") is not None else "N/A",

```

```

    "Author_Last": root.findtext("./creator//surName").strip() if
root.find("./creator//surName") is not None else "N/A",

    "Author_Contact":
root.findtext("./creator//electronicMailAddress").strip() if
root.find("./creator//electronicMailAddress") is not None else "N/A",

}

    all_dfs.append(record)

# Combine into table

final_df = pd.DataFrame(all_dfs) display(final_df)

```

Python Code for Data Composition of .xml files – Objective 1 Table 2

```

# Create headers for all data frames
headers = {'User-Agent': 'Mozilla/5.0'}

all_dfs = []

# Creating a second table of XML Data for Visualization

# Define new term
ns = {'mdb': 'http://mother-db.org/mdb'}

# Create another for loop
for url in urls:

    response = requests.get(url, headers=headers)

    if response.status_code == 200:
        root = ET.fromstring(response.content)

        # Find data points
        record2 = {
            # Keep Source as a consistent point across tables
            "Source": url.split('/')[ -1],

            # Taxonomy
            "Common Name":
root.findtext("./taxonRankName[.='Species']/../commonName") or "N/A",

            "Scientific Name":

```

```

root.findtext("../../../taxonRankName[.='Species']/../taxonRankValue") or "N/A",

# Donor Information
    "Donor ID": root.findtext("../../../mdb:donorID", namespaces=ns) or "N/A",
    "Donor Life Stage": root.findtext("../../../mdb:donorLifeStage",
namespaces=ns) or "N/A",
    "Donor Sex": root.findtext("../../../mdb:donorSex", namespaces=ns) or
"N/A",
    "Ovary Sampled": root.findtext("../../../mdb:ovaryPosition",
namespaces=ns) or "N/A",
    "Slide ID": root.findtext("../../../mdb:slideID", namespaces=ns) or "N/A"
}

all_dfs.append(record2)

# Combine into table
final_df = pd.DataFrame(all_dfs)

display(final_df)

```

Python Code for Data Composition of .xml files – Objective 1 Table 3

```

# Create headers for all data frames
headers = {'User-Agent': 'Mozilla/5.0'} all_dfs = []

# Creating a third table of XML Data for Visualization
# Redefine new term
ns = {'mdb': 'http://mother-db.org/mdb'}

# Create another for loop
for url in urls:

    response = requests.get(url, headers=headers)

    if response.status_code == 200:
        root = ET.fromstring(response.content)

        # Find data points
        record3 = {
            # Keep Source as a consistent point across tables
            "Source": url.split('/')[ -1],

            # Donor Information
            "Donor ID": root.findtext("../../../mdb:donorID", namespaces=ns) or "N/A",
            "Slide ID": root.findtext("../../../mdb:slideID", namespaces=ns) or

```

```

"N/A",

        # Sample and Methods Information
        "Tissue Thickness": root.findtext("./mdb:thickness",
namespaces=ns) or "N/A",
        "Units": root.findtext("./mdb:unit", namespaces=ns) or
"N/A",
        "Microscope Make and Model": root.findtext("./mdb:notes",
namespaces=ns) or "N/A"
    }

    all_dfs.append(record3)

# Combine into table
final_df = pd.DataFrame(all_dfs)
display(final_df)

```

Image-Level Characteristics Summary

```

from PIL import Image
import glob
import pandas as pd
import os
import matplotlib.pyplot as plt

# Path to H_glaber .png images

img_dir = "~/nmr-ovarian-follicle-ml/data/raw/H_glaber/EDAreduced/"

# Pull all H_glaber .png files
img_paths = glob.glob(os.path.join(img_dir, "*.png"))
summary_data = []

for img_path in img_paths:
    print(f"Processing {img_path}")
    try:
        img = Image.open(img_path)
        width, height = img.size
        summary_data.append({
            "image_name": os.path.basename(img_path),
            "width": width,
            "height": height,
            "mode": img.mode # RGB, grayscale, etc.
        })

```

```
except Exception as e:

    summary_data.append({

        "image_name": os.path.basename(img_path),

        "width": "ERROR",

        "height": "ERROR",

        "mode": "ERROR"

    })

# Save results to a .csv before turning into a formatted table
df = pd.DataFrame(summary_data)
df.to_csv("png_summary.csv", index=False)

# Load the formatted .csv file
df = pd.read_csv("formatted_slide_summary.csv")

# Create figure and table
fig, ax = plt.subplots(figsize=(12, 5))

ax.axis('off')

table = ax.table(

    cellText=df.values,

    colLabels=df.columns,

    cellLoc='center',

    loc='center')

# Turn off auto font scaling
table.auto_set_font_size(False)
table.set_fontsize(10)

# Calculate max text length per column (including header)
col_widths = []

for col in df.columns:

    max_len = max(
```

```

        df[col].astype(str).map(len).max(),

        len(col))

    col_widths.append(max_len)

# Normalize widths so they fit figure
total = sum(col_widths)
col_widths = [w / total for w in col_widths]

# Format the table appropriately (apply width, scale, type-face)
for i, width in enumerate(col_widths):

    for j in range(len(df) + 1): # +1 for header row

        table[j, i].set_width(width)

table.scale(1, 1.6)

for (row, col), cell in table.get_celld().items():

    if row == 0:

        cell.set_text_props(weight='bold')

# Save figure as the slide summary table of all 9 images analyzed
plt.savefig("slide_summary_table.png", bbox_inches='tight', dpi=300)
plt.close()

```

Python code for creating Tissue-specific RGB histograms:

```

from PIL import Image
import matplotlib.pyplot as plt
import numpy as np
import glob
import os

# Directories
img_dir = "~ /nmr-ovarian-follicle-
ml/data/raw/H_glaber/Histograms/TissueHist/"

output_path = "~ /nmr-ovarian-follicle-

ml/data/raw/H_glaber/Histograms/TissueHist/combined_tissue_histograms.png"

# Get image paths to all 9 images

```

```
img_paths = sorted(glob.glob(os.path.join(img_dir, "*.png"))[:9])
n_images = len(img_paths)

# Grid size of combined image cluster (3x3 for 9 images)
rows = 3
cols = 3
fig, axes = plt.subplots(rows, cols, figsize=(15, 12))
axes = axes.flatten()

for idx, img_path in enumerate(img_paths):

    ax = axes[idx]

    try:

        img = Image.open(img_path).convert("RGB")

        img_array = np.array(img)

        # Tissue mask (remove background)
        mask = np.mean(img_array, axis=2) < 240

        tissue_pixels = img_array[mask]

        if tissue_pixels.size == 0:

            ax.set_title("No Tissue")

            ax.axis("off")

            continue

        # Plot RGB histograms

        for i, color in enumerate(['r', 'g', 'b']):

            ax.hist(tissue_pixels[:, i], bins=256, alpha=0.4, density=True)

        # Formatting

        filename = os.path.basename(img_path)

        ax.set_title(filename, fontsize=9)

        ax.set_xlim(0, 255)

        ax.set_xlabel("Intensity", fontsize=8)

        ax.set_ylabel("Density", fontsize=8)

    except Exception as e:

        ax.set_title("Error")
```

```

        ax.axis("off")

        print(f"Error processing {img_path}: {e}")

# Aesthetic adjustment for title and scale
fig.suptitle("Tissue-Specific RGB Histograms Across MOTHER Slides",
            fontsize=16)
plt.tight_layout(rect=[0, 0, 1, 0.96])
# Save figure
plt.savefig(output_path, dpi=300)
plt.close()

```

Python code for plotting and running analysis with QuPath provided metrics

```

import pandas as pd
import glob
import os

files = glob.glob("nuclei_*.csv")

dfs = []

for file in files:

    df = pd.read_csv(file, sep="\t")    # IMPORTANT

    df.columns = df.columns.str.strip()

    df["slide"] = os.path.basename(file)

    dfs.append(df)

data = pd.concat(dfs, ignore_index=True)
print(data.columns.tolist())

#cellcount
cell_counts = data.groupby("slide").size()
print(cell_counts)

cell_counts.index = [

    f"tissue_measurements{i+1}.csv" for i in range(len(cell_counts))

]

print(cell_counts)

#Summary

```

```

summary = data.groupby("slide")["Nucleus: Area"].agg(
    ["count", "mean", "std", "median"]
)
print(summary)

# more bio feautures
features = [
    "Nucleus: Area",
    "Nucleus: Circularity",
    "Nucleus: Eccentricity",
    "Nucleus/Cell area ratio",
    "Nucleus: Hematoxylin OD mean"
]

summary = data.groupby("slide")[features].agg(
    ["mean", "std", "median"]
)

print(summary)

#loading tissue Area
tissue = pd.read_csv("tissue_area_summary.csv")
tissue.columns = tissue.columns.str.strip()
print(tissue.columns.tolist())

tissue_area_um2 = tissue.set_index("slide")["Area  $\mu\text{m}^2$ "]
print(tissue_area_um2)

#Tissue and Cell
summary_df = pd.DataFrame({
    "tissue_area_um2": tissue_area_um2,
    "cell_count": cell_counts
})

summary_df["tissue_area_mm2"] = summary_df["tissue_area_um2"] / 1e6
summary_df["cells_per_mm2"] = summary_df["cell_count"] /
summary_df["tissue_area_mm2"]
print(summary_df)

summary_df = summary_df.reset_index() # now 'slide' is a column
print(summary_df.head())

```

```
print(summary_df.to_string())

#Visualize Cell Density
import seaborn as sns
import matplotlib.pyplot as plt

plt.figure(figsize=(8,5))
sns.barplot(data=summary_df, x="index", y="cells_per_mm2")
plt.xticks(rotation=45)
plt.title("Cell Density per Slide (cells/mm2)")
plt.show()

#Nuclear Area by Slide
import seaborn as sns
import matplotlib.pyplot as plt

plt.figure(figsize=(8,5))
sns.boxplot(data=data, x="slide", y="Nucleus: Area")
plt.xticks(rotation=45)
plt.title("Distribution of Nuclear Area by Slide")
plt.show()

#Density Plot
plt.figure(figsize=(8,5))
sns.kdeplot(data=data, x="Nucleus: Area", hue="slide", common_norm=False)
plt.title("Nuclear Area Distribution per Slide")
plt.show()

#Bootstrapping for CI
import numpy as np
def bootstrap_mean(series, n_boot=1000):

    means = []

    for _ in range(n_boot):

        sample = series.sample(frac=1, replace=True)

        means.append(sample.mean())

    return np.percentile(means, [2.5, 97.5])

for slide in data["slide"].unique():

    slide_data = data[data["slide"] == slide]["Nucleus: Area"]

    ci = bootstrap_mean(slide_data)

    print(slide, "95% CI:", ci)

#Correlation Exploration
```

```

numeric = data.select_dtypes(include="number")

plt.figure(figsize=(10,8))
sns.heatmap(numeric.corr(), cmap="coolwarm", center=0)
plt.title("Feature Correlation Matrix")
plt.show()

```

Python code to create a montage of whole-slide images

```

# Read and downscale an image
def safe_read_image(path: Path, max_side: int = 512) ->
Optional[Image.Image]:
    """Read an image safely and downscale so montage stays lightweight."""
    try:
        img = Image.open(path)
        img = ImageOps.exif_transpose(img)
        img = img.convert("RGB")

        w, h = img.size
        scale = max(w, h) / float(max_side)
        if scale > 1.0:
            new_w = int(round(w / scale))
            new_h = int(round(h / scale))
            img = img.resize((new_w, new_h), resample=Image.BILINEAR)
        return img
    except Exception:
        return None

# Locate the reduced PNG inside an accession folder
def find_reduced_png(accession_dir: Path) -> Optional[Path]:
    hits = sorted(accession_dir.glob("*_reduced.png"))
    if not hits:
        return None
    if len(hits) == 1:
        return hits[0]
    return sorted(hits, key=lambda p: len(p.name))[0]

# Assemble individual images into a grid
def make_montage(
    images: List[Tuple[str, Image.Image]],
    cols: int = 5,
    tile_pad: int = 8,
    label_height: int = 18,
) -> Image.Image:
    """Create a montage with simple labels (accession id)."""
    if not images:
        raise ValueError("No images to montage.")

    max_w = max(img.size[0] for _, img in images)
    max_h = max(img.size[1] for _, img in images)

    rows = int(math.ceil(len(images) / cols))

```

```
tile_w = max_w
tile_h = max_h + label_height
canvas_w = cols * tile_w + (cols + 1) * tile_pad
canvas_h = rows * tile_h + (rows + 1) * tile_pad

canvas = Image.new("RGB", (canvas_w, canvas_h), (20, 20, 20))

try:
    from PIL import ImageDraw, ImageFont
    draw = ImageDraw.Draw(canvas)
    font = ImageFont.load_default()
except Exception:
    draw = None
    font = None

for idx, (label, img) in enumerate(images):
    r = idx // cols
    c = idx % cols

    x0 = tile_pad + c * (tile_w + tile_pad)
    y0 = tile_pad + r * (tile_h + tile_pad)

    img_w, img_h = img.size
    x_img = x0 + (tile_w - img_w) // 2
    y_img = y0 + (max_h - img_h) // 2
    canvas.paste(img, (x_img, y_img))

    if draw is not None and font is not None:
        label_y = y0 + max_h + 2
        draw.text((x0 + 2, label_y), label, fill=(235, 235, 235),
font=font)


return canvas
```

Additional Figures

a. Supplemental Figure 1. Cell and Nucleus Count Summary per Slide

	count	mean	std	median
slide				
nuclei_measurements1.csv	66253	26.335238	22.867908	19.75
nuclei_measurements2.csv	151053	35.299699	37.361070	24.00
nuclei_measurements3.csv	83598	38.149328	43.257404	23.75
nuclei_measurements4.csv	123866	33.494486	29.159414	24.50
nuclei_measurements5.csv	194773	41.546733	45.785996	26.25
nuclei_measurements6.csv	134475	33.912960	35.741969	23.50
nuclei_measurements7.csv	70463	34.742457	28.662124	26.00
nuclei_measurements8.csv	705869	27.714490	29.472896	19.25
nuclei_measurements9.csv	921344	27.328513	27.530887	19.75


b. Supplemental Figure 2. Boxplot Representation of the Distribution of Nuclear Area Across all 9 Slides.

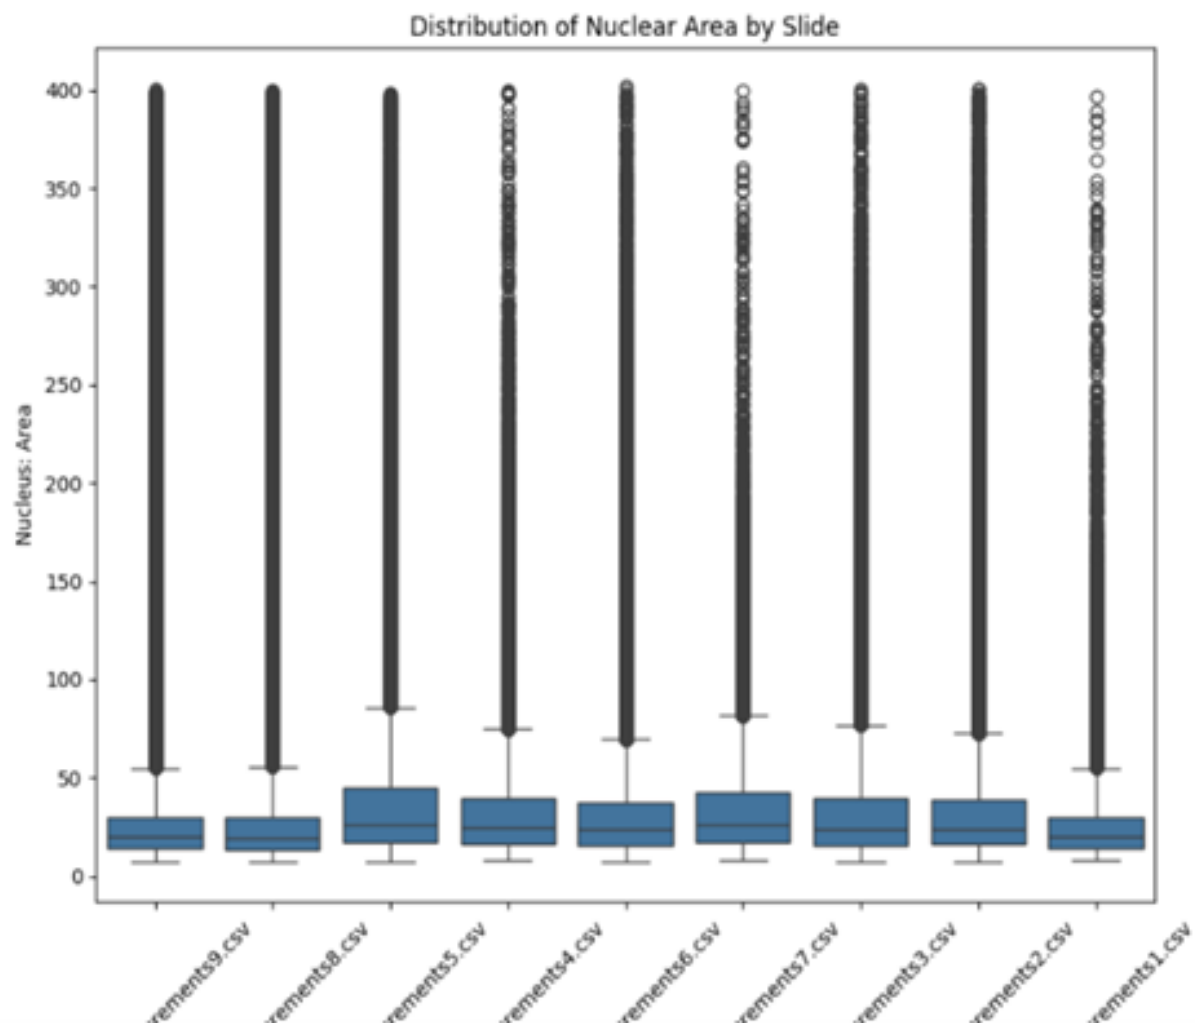

c. Supplemental Figure 3. Bootstrapping output from QuPath Analysis

nuclei_measurements9.csv	95% CI:	[27.27250253	27.38201308]
nuclei_measurements8.csv	95% CI:	[27.65097524	27.77989676]
nuclei_measurements5.csv	95% CI:	[41.3428683	41.75334267]
nuclei_measurements4.csv	95% CI:	[33.33797955	33.64982723]
nuclei_measurements6.csv	95% CI:	[33.72407297	34.107099]
nuclei_measurements7.csv	95% CI:	[34.52627718	34.95122804]
nuclei_measurements3.csv	95% CI:	[37.85620058	38.44432044]
nuclei_measurements2.csv	95% CI:	[35.1153255	35.48538489]
nuclei_measurements1.csv	95% CI:	[26.17093632	26.50465875]

d. Supplemental Figure 4. Montage showing all 9 whole-image slides

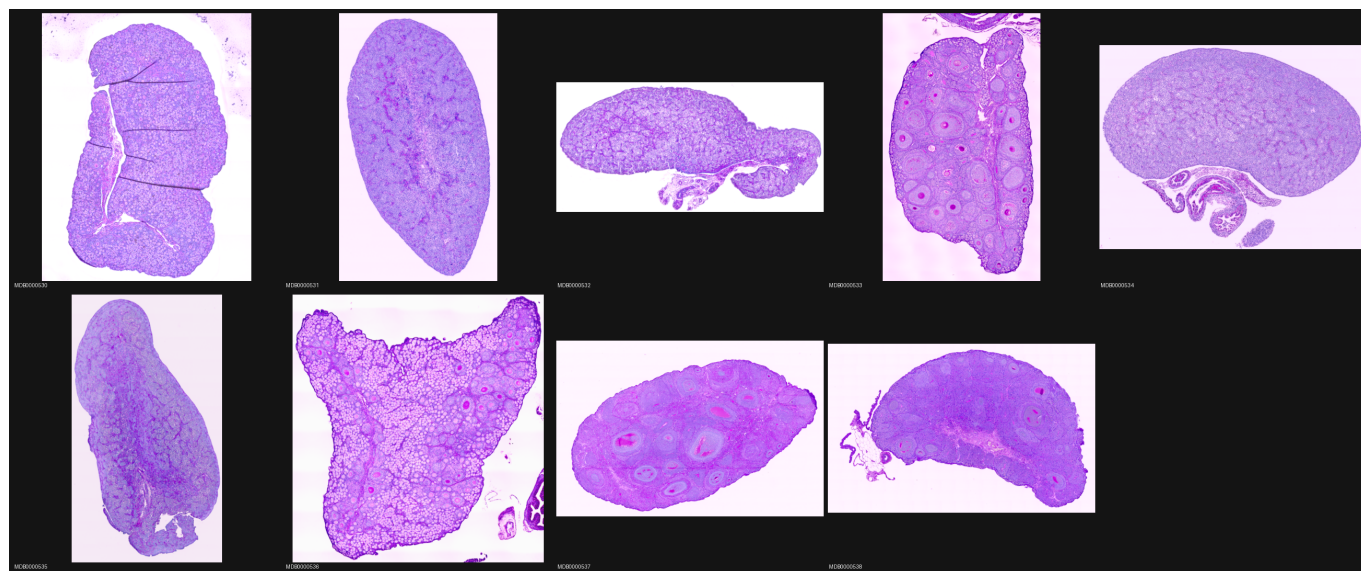

References

- Coles, J., Orkuma, M., Styborski, P., & Tenempaguay-Nunez, S. (2026). Machine-learning histology analysis of Heterogeneous glaber [Unpublished project proposal]. Biological Data Science Program, Arizona State University.
- Coles, J., Orkuma, M., Styborski, P., & Tenempaguay-Nunez, S. (2026). NMR ovarian follicle ML project [Source code]. GitHub. <https://github.com/ReproAnalytics/nmr-ovarian-follicle-ml>
- Barreñada, O., & Briño-Enriquez, M. (2026). Multispecies Ovary Tissue Histology Electronic Repository. <https://mother-db.org>
- IBM. (n.d.). Exploratory Data Analysis. Ibm.com. <https://www.ibm.com/think/topics/exploratory-data-analysis>
- MOTHER (2024). MOTHER Resources on GitHub. Available at <https://github.com/mother-db>.
- ReproAnalytics (2026). NMR Ovarian Follicle ML Project. <https://github.com/ReproAnalytics/nmr-ovarian-follicle-ml>
- Watanabe, K. H., Dietrich, S. W., Ding, Y., Ma, W., Sluka, J. P., & Zelinski, M. B. (2024). Overview of the Multispecies Ovary Tissue Histology Electronic Repository (MOTHER). *Biology of Reproduction*, 111(3), 512–515. <https://doi.org/10.1093/biolre/ioae101>